

## *FBL-360 Double Sides Labeling Machine*



### **Introduction:**

1. Remove all temporary fixture in machine before connecting to power supply.
2. Please check and make sure the machine is place at a level surface.
3. The serial number of the machine cannot be zero as this will indicate the total number of the packing you want.
4. Make sure all the connection points is ideally fixed and no part is loosen.
5. Do not leave anything on the top of this machine especially like packet drinks and liquid item.
6. Avoid putting your hand into the machine during the operation as this will cut off your hand.
7. Closed the side doors of the machine properly to avoid winds.
8. Set the speed and the range of flowing according to the type of materials you want to pack

### **Parameter:**

Item	Parameter
Size	2200mm×1400mm×1300mm ( Length × Width × Height )
Total	300W
Voltage	380V
Frequency	50-60HZ
Labeling Speed	40-100 bottles/minutes (according to the specification, shape of bottle and length of label)
Size of label	length 30mm~100mm ; Width 30mm~160mm
Bottle specification	Height 80~270mm, Width (between 2 sides)≤ 110mm