

## AB2000 Labeling Machine



### Safety cautions to operate labeling machine:

- While operation, the operating staff stands right ahead the machine 10cm from the machine (freely operating the labeling object and control panel is appropriate).
- Please prepare grounding wire to prevent accidents.
- Please confirm the power supply for the machine. Don't plug wrong power supply. This machine adopts one way 220V power.
- Do not extrude hands into the machine cover to prevent nipping accident or electric shock.
- Do not flushing the machine by water. If the workplace is humid, the operating staff should not operate on barefoot.
- Don't change the parts of the machine freely.
- If the machine is not used, please roll back the label into the label spool to prevent dirty and humidity.
- It is only technicians who can repair the electric equipment.
- If do not use the machine, please pull out power plug.
- Main parts should frequently be lubricated by oil.

It can label for round bottles (which can be conveyed vertically) or on side surface of other packing's.

<b>Model</b>	<b>AB2000</b>
Power supply	IP 220V 50HZ750W
Air pressure	2-5 kg/cm 2
Applicable container height	50-300mm (3:1 ratio for height and diameter)
Applicable container diameter	ϕ 25-100mm (> ϕ 100mm need to customize)
Applicable label	adhesive sticker (transparent and special stickers need to customize)
Applicable label range	L(1 5-250)mmxH(≤120)mm
Space between labels	≥3mm
Label scroll	± 1 mm(except container error)
Table height	950 mm
Machine dimension	L1800mmxW1100mmxH1700mm
Machine weight	250kg