

## MIC-ZF1 Automatic Press Cap Machine



Put all caps into the cap vibrating plate, the cap along the loading cap tunnel placed in the bottle mouth ordered.

Adjust the speed governor can change vibrating cap speed.

After the cap be placed in the right position of the bottle mouth, use press cap head to press cap. This machine easy operation and adjustable easy.

## **PARAMETER**

Press Head	1 head
Suitable Cap Diameter	Can according to customer different cap diameter customize the press cap head)
<b>Production Speed</b>	1000-2000 Bph
Voltage	220v/380v
Power	1.0Kw
Capping Error	≤±1
Work Pressure	0.55Mpa-0.65Mpa
Size	1600mm × 1100mm× 1700mm
Weight	400kg